

GUARDDO

GUIDE

User manual.....3

Passwords.....4

Basic functions.....5

Entering administrator password.....6

Entering a false password.....7

Formatting on macOS.....8

Formatting on Windows..... 9

Change administrator password.....10

Changing a false password.....11

Initialization.....12

Important.....13

Contacts.....14

USER MANUAL

TECHNICAL CHARACTERISTICS	
MATERIAL	Aviation aluminum
CHARACTERISTICS	• Robust design • Secure keypad password access • Real-time hardware encryption with 256-bit AES algorithm • Wear-resistant keypad • Destroy function • Hashing: 256-bit SHA
REQUIREMENT TO OS	• Windows 2000 / XP / Vista / Win7/10/11 • Mac OS 10.2 or higher • Linux .4.22 or higher（such as Ubuntu, Android）
ENVIRONMENT	• Operating temperature: 5°C ~ 40°C • Working humidity: 20%RH ~ 80%RH • Storage temperature: -20°C ~ 70°C • Storage humidity: 10%RH ~ 90%RH
INTERFACE	Type-C
SIZE	97,2 mm x 24,2 mm x 12,7 mm



PASSWORDS


TWO TYPES OF PASSWORD	
ADMINISTRATOR PASSWORD	Supports read and write (default password:112233)
FALSE PASSWORD	Upon entry, all data on the flash drive will be erased, with no possibility of recovery (default password: 332211)

PASSWORD RULES	
1	The password can be 6 to 32 digits in length
2	If an incorrect password is entered 5 times in a row, all data will be deleted
3	The password cannot contain 4-digit repeating numbers, for example, 4-4-4-4-4-X-X, nor can it contain 4-digit consecutive numbers, e.g., (1-2-3-4-X-X)

MAIN FUNCTIONS

UNLOCKING

1

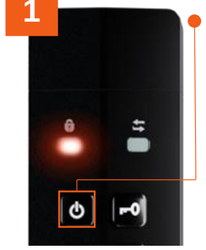

Press the power button or connect the device to a computer

2



Enter the password. The left indicator light will be red, the right indicator light will flash green during each press (default password is 112233).

3



If you have entered the wrong password, press the power button to cancel, and then enter the password again

4



As soon as the correct password is accepted, the device will unlock

LOCKING

1



In unlock mode, press and hold the power button for two seconds to lock the device



ADMINISTRATOR PASSWORD ENTRY

1



Press the power button or connect the device to a computer

2



Enter your password. The left indicator light will be red, the right indicator light will flash green during each keystroke

3



Press the key button. The left indicator light flashes blue

4



As soon as the password is accepted. The indicator light turns green and the device is unlocked

FALSE PASSWORD ENTRY

1



Press the power button or connect the device to a computer

2



Enter your false password. The left LED will light red, the right LED will flash green during each key press

3



Press the key button. The left indicator light flashes blue

4




As soon as the password is accepted. The indicator light will turn red. All contents of the device will be deleted

FORMATING ON MACOS


After creating a new password, you need to format the device. To do this, connect the flash drive to your computer

1

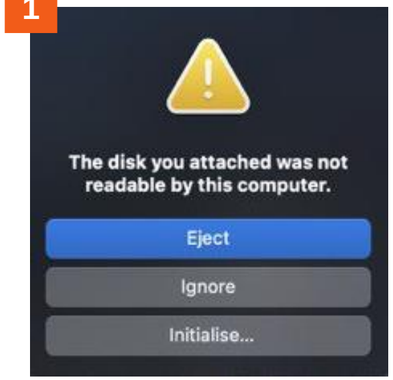

After the flash drive has been inserted into the computer, this notification will appear. Click “Initialize”

2

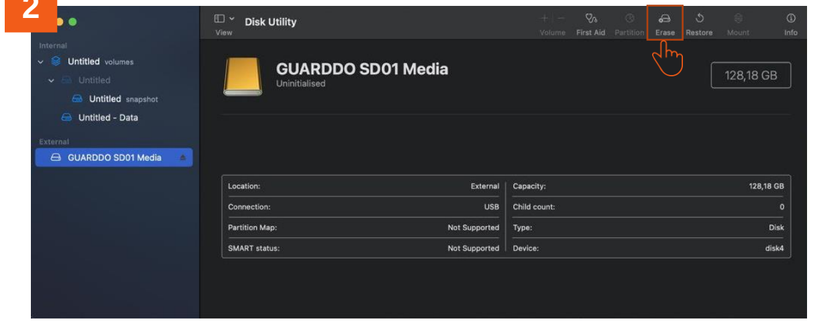

Then go to the flash drive and click “erase”

3




Under “format,” select «ExFat»

4



Press “erase”

5

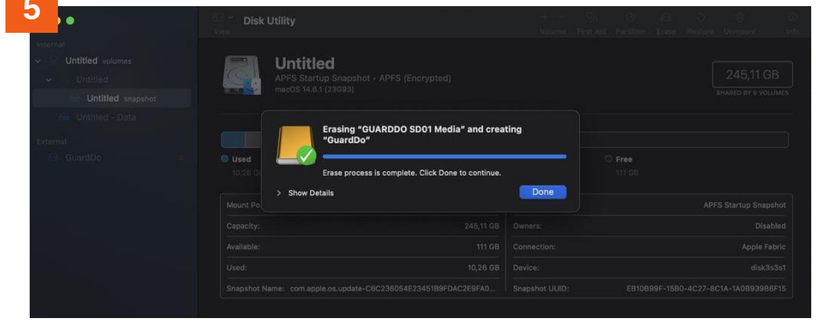


Done

FORMATING ON WINDOWS


After creating a new password, you need to format the device. To do this, connect the flash drive to your computer

1

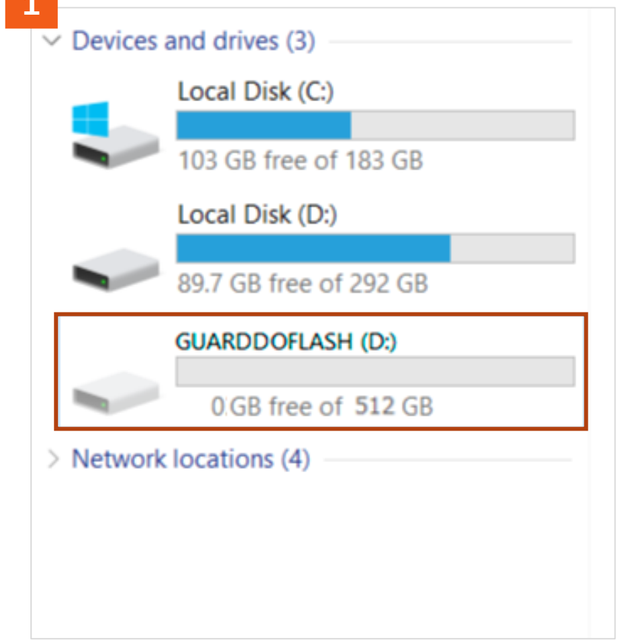


Insert the Flash into the computer and select the desired drive

2

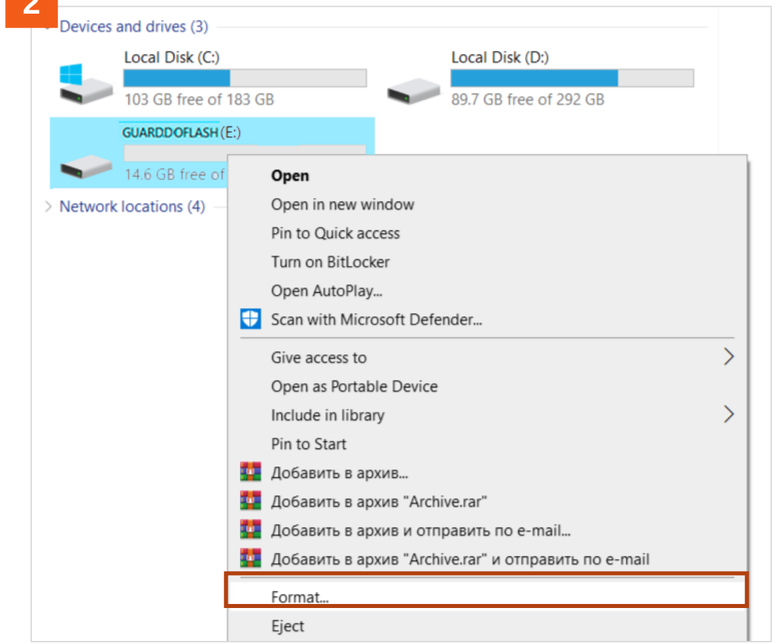

To start using the disk, you need to format it. To do this, click on the selected disk and select the Format option

3

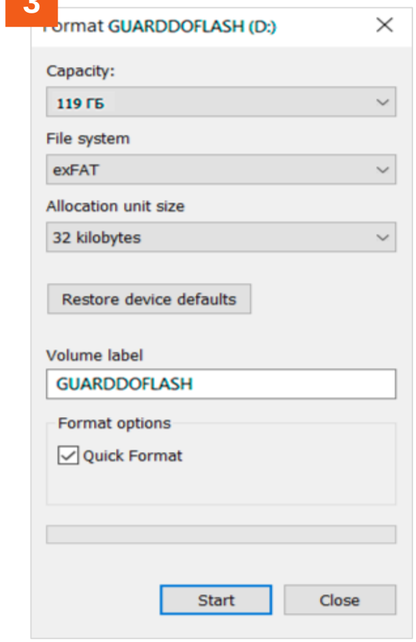

Under “file system” select “ExFat” and click start. Flash is ready to work

CHANGE ADMINISTRATOR PASSWORD

1



Press the power button or connect the device to a computer

2



Simultaneously press and hold the key button and digit one for 10-20 seconds. The right indicator light will blink green and turn off while held, the left indicator light will blink red

3



When the left indicator light turns blue, release the key button and digit one

4



Start entering the old administrator password. The left indicator will flash in red, and the right indicator during each press in green.

5



Press the key button to confirm the password. The left indicator light will flash green

6



Enter a new administrator password, 6 to 32 digits in length. The left indicator will flash green and right indicator will also flash green during each keystroke

7



Press the key button to confirm the new administrator password. The left LED flashes blue

8



Enter the new administrator password again. The left LED will flash blue and the right LED will flash green during each press. Press the key button to save the password

9



The password will change and the device will lock after 20 seconds

RESETTING A FALSE PASSWORD

1



Press the power button or connect the device to a computer

2



Simultaneously press and hold the key and zero button for 10-20 seconds. The right indicator light will blink green and turn off while holding and will start blinking red

3



When the left indicator light blinks blue, release the key button and zero

4



Start entering the administrator password. The left LED will flash red and the right LED will flash green during each press

5



Press the key button to confirm the password. The left indicator light will flash green

6



Enter a new false password, 6 to 32 digits in length. The left LED will flash green and the right LED will also flash green each time the keys are pressed

7



Click the key to confirm the new false password. The left indicator is a blinking sine color indicator

8



Enter the new false password again. The left LED will flash blue and the right LED will flash green during each press. Press the key button to save the password

9



The password will change and the device will lock after 20 seconds

INITIALIZATION

1



Press the power button or connect the device to a computer

2



Simultaneously press and hold the key button and the number nine for 10-20 seconds. Both indicators will start flashing red

3



Once both lights turn blue, release the key button and the number nine

4



Press the number one to initialize the device. The left LED will flash green

5



Enter a new administrator password from 6 to 32 digits. The left LED will blink green and the right LED will also blink green each time you press the keys

6



Press the key button to confirm the password. The left indicator light will flash blue

7



Enter the new administrator password again. The left LED will blink blue. Press the key button to save the password

8



Press and hold the power button to turn off the flash

During the initialization process the password and all data will be deleted.

Make a backup copy Before processing

IMPORTANT!

1. If you forget your password, you cannot access the data stored on your device, you must format it.
When you reset the device, the following happens:
- All data is erased
- It needs to be initialized
- You need to set a new administrator password and a false password

2. If the battery is low, you can plug the flash drive into the powered port. It will charge automatically and will take about two hours (until fully charged). A full battery charge is enough for 10 hours of battery life without connecting to the port. Even if the battery is low, the flash drive will work when plugged into a port on a computer, laptop or phone.

3. The warranty on the flash drive is exactly one year. If there are any problems with the flash drive (through no fault of the customer), we will replace the flash drive with a new one free of charge.

CONTACTS

Click on the app icon and you will have a support chat open up





